
How to Measure Your Vehicle

FOR EVERETT ™ BOOT CRATE



STEP 1: FLOOR DEPTH OF BOOT SPACE

Measure the floor depth
(from rear of the vehicle back seats to the bottom of the hatch)

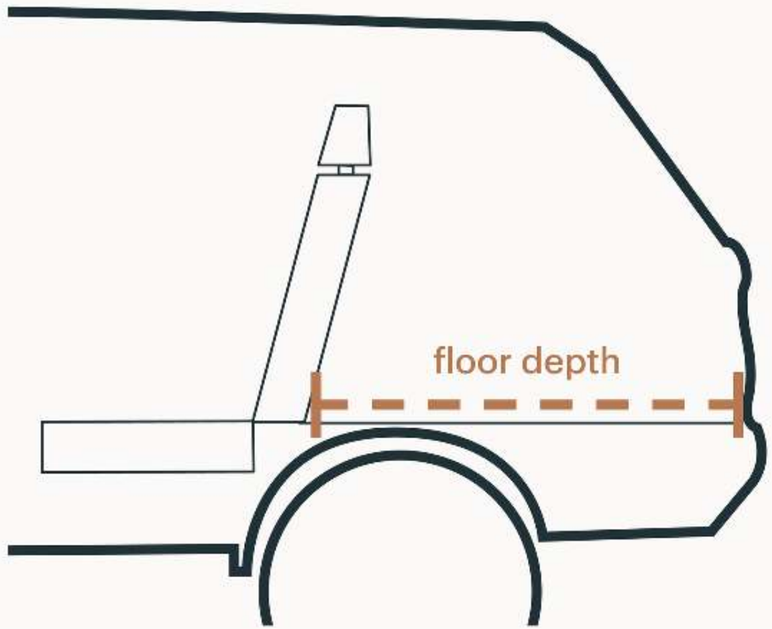


This measurement should be at minimum of:

33 in (83.8 cm)

STEP 2: SEAT DEPTH OF BOOT SPACE

Measure from the top of the vehicle back seat to the end of the boot

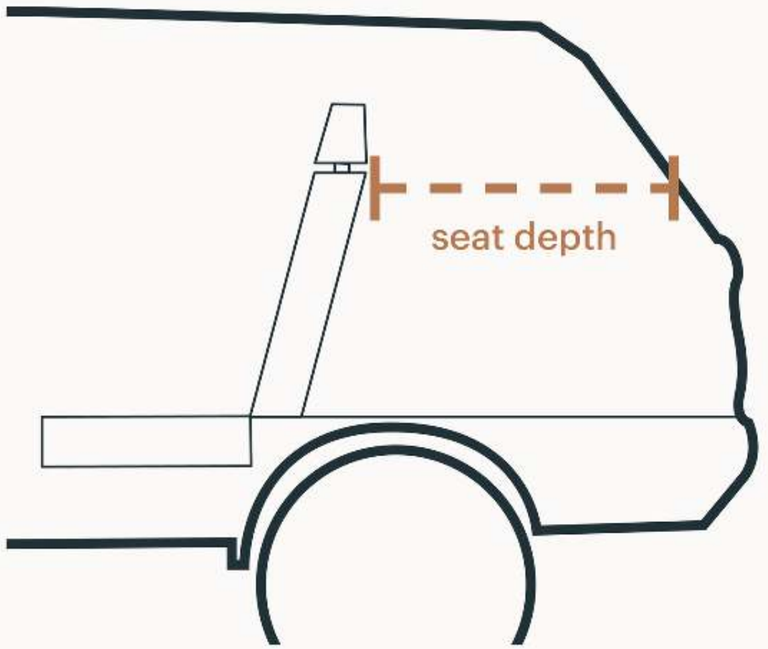


This measurement should be at minimum of:

20 in (50.8 cm)

STEP 3: LENGHT OF BOOT SPACE

Measure the narrowest point of your floor length
(side to side), this usually where the wheel wells are.

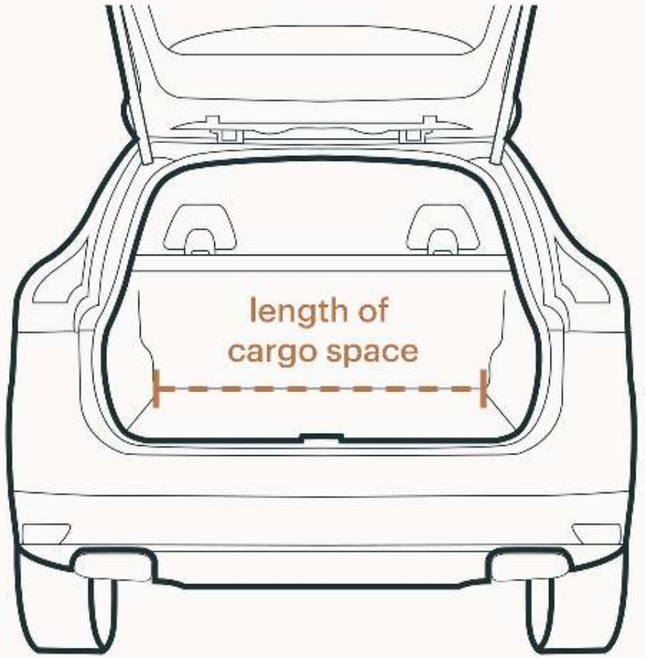


This measurement should be at minimum of:

38 in (96.5 cm) long

STEP 4: HEIGHT OF CARGO

Measure the height of the boot space
(floor to the lowest ceiling point).

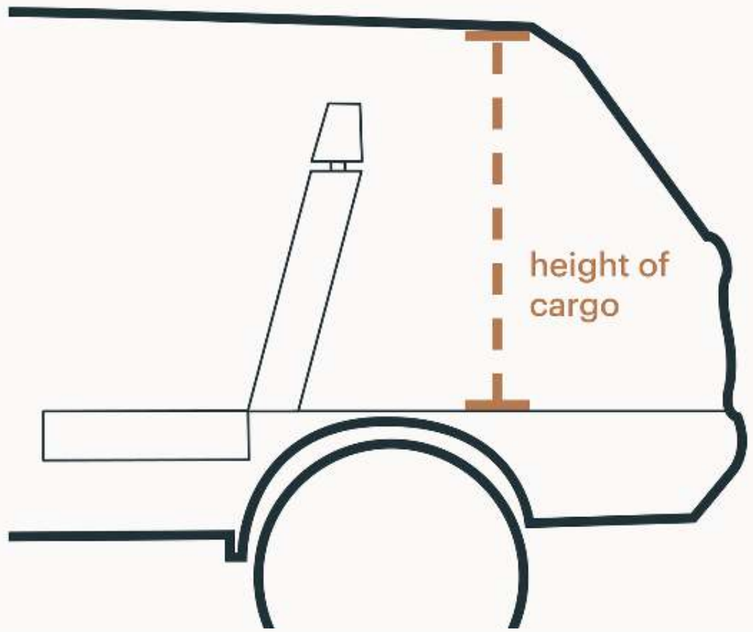


This measurement should be at minimum of:

30 in (76.2 cm) long

STEP 5: LOCATING VEHICLE ANCHOR BARS

Four vehicle anchor points are required for propper installation.
Please refer to the Everett manual for propper tie-down instructions.

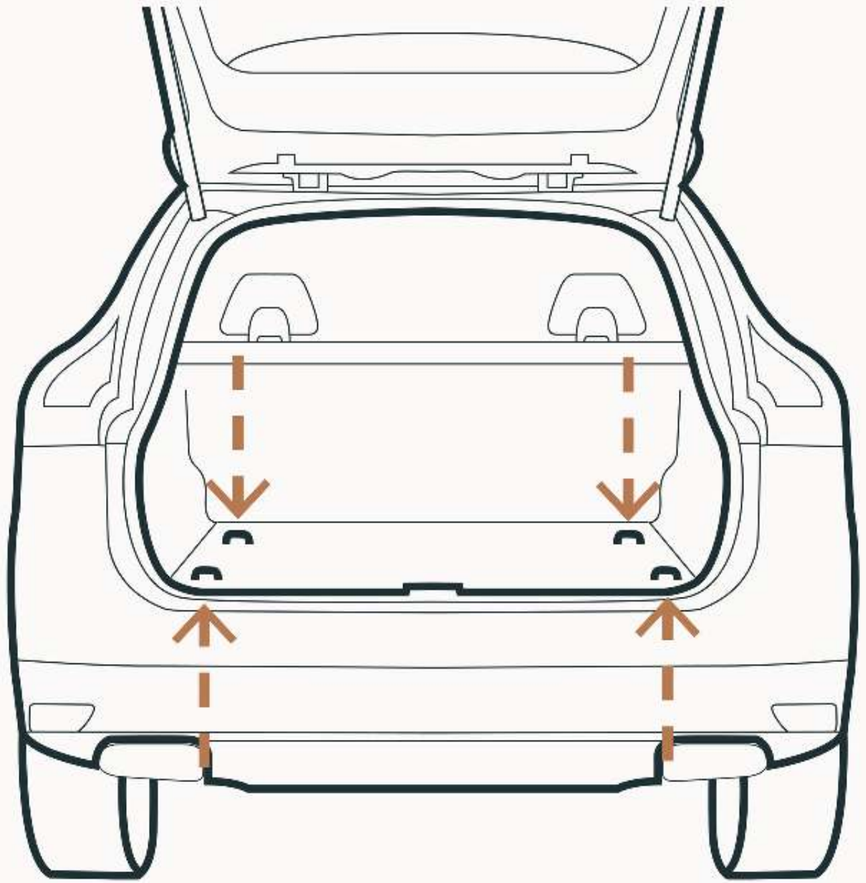


How to Measure Your Pet

FOR EVERETT ™ BOOT CRATE



STEP 1: LENGTH

Measure your pet from the tip of its nose to base of its tail.

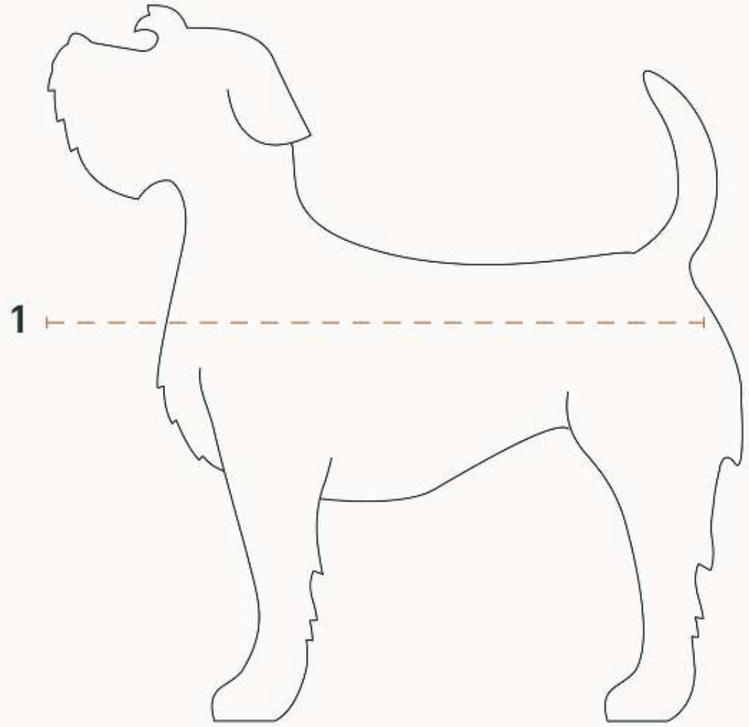


Pet should be no more than **32 in (81 cm) long**.

STEP 2: HEIGHT

Measure your pet from shoulder blade* to feet.

*The withers height does not include dogs head.

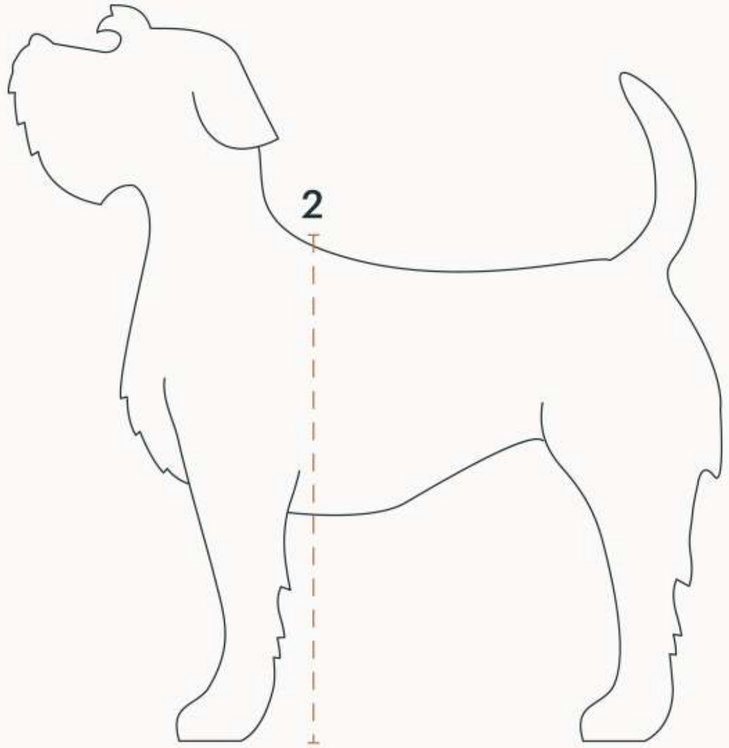

Pet should be no more than **21 in (53 cm) tall**.

Your pet should be able to sit, lay in a curled position, stand, and turn around in the crate but it should also be a snug fit to ensure saftey.



